

# TP-LINK First Install Checklist

Steps to take on your computer	Steps to take on your node hardware
<input type="checkbox"/> Download the AREDN® <b>factory.bin</b> file for your device from <a href="http://arednmesh.org">arednmesh.org</a>	<p style="text-align: center;"><i>None</i></p>
<input type="checkbox"/> Verify your computer has a working <b>PXE</b> or <b>TFTP</b> server program and copy the <b>factory.bin</b> file into its TFTP directory. Rename <i>factory.bin</i> to <b>recovery.bin</b>	<p style="text-align: center;"><i>None</i></p>
<input type="checkbox"/> Set up a simple Ethernet switch to manage connections between your computer and the device being flashed	<p style="text-align: center;"><i>None</i></p>
<input type="checkbox"/> Set your computer's Ethernet interface to a static IP address of <i>192.168.0.100</i>	<p style="text-align: center;"><i>None</i></p>
<input type="checkbox"/> Connect your computer's Ethernet port to an open port on your Ethernet switch	<input type="checkbox"/> Connect the PoE's <i>LAN</i> port to an open port on your Ethernet switch <input type="checkbox"/> With the PoE unit powered <b>off</b> , connect the PoE's <i>POE</i> port to the Ethernet port of the device
<input type="checkbox"/> Verify its configuration and start your <b>PXE</b> or <b>TFTP</b> server	<input type="checkbox"/> Press and hold the <i>Reset</i> button on the device, then power on the PoE unit <input type="checkbox"/> Continue holding the <i>Reset</i> button until you verify that data was sent from your computer, then release the reset button
<input type="checkbox"/> Once the <b>bin</b> file has been sent from your computer, you can stop the <b>PXE</b> or <b>TFTP</b> server	<input type="checkbox"/> After the <b>recovery.bin</b> image is uploaded, the device will process it and reboot (this process takes several minutes)
<input type="checkbox"/> After the node has finished rebooting, verify it is reachable by pinging <i>192.168.1.1</i> <input type="checkbox"/> Set your computer's Ethernet interface to a static IP address of <i>192.168.1.10</i> <input type="checkbox"/> Open a web browser and enter <a href="http://192.168.1.1">http://192.168.1.1</a> as the URL	<input type="checkbox"/> Click the <i>Setup</i> button and login with user = <b>root</b> & pwd = <b>hsmm</b> <input type="checkbox"/> Configure your new node with your callsign and password <input type="checkbox"/> Click <i>Save Changes</i> and the node will reboot
<input type="checkbox"/> Set your computer's Ethernet interface to get an IP address automatically using DHCP <input type="checkbox"/> Open a web browser and enter <a href="http://localnode">http://localnode</a> as the URL to begin using your new node	<p style="text-align: center;"><i>None</i></p>